

How to use OAK?

※ Abbreviation

- OAK : Override Audit Kit
- UC : User Code
- OCC : Override Code Change
- OC : Override Code
- UCC : User Code Change
- Err : Error
- NOC : Nabi Override Code
- MC : Master Code
- F : Frozen
- OOC : OAK Override Code
- MCC : Master Code Change

1. Six (6) digit OC

Controller must change the initial OC of Nabi and OAK from the factory with new OC accordingly before guests use the safe, so that OAK can be used when a safe is troubled.

- * The OC of Nabi and OAK should be the same.
- * If the initial OC is lost, it is impossible to use OAK itself as well as to change its OC.

2. How to open door with OAK?

- * Connect Nabi and OAK with USB cable, and push the following buttons.

NOC and OOC Accord

Welcome
Diplomat Safe

C : Open or Read
: Change OC

NOC and OOC Disaccord

Welcome
Diplomat Safe

NOC and OOC
Disaccord

C : Open or Read
: Change OC

Step 1 : Press C Button.

Press
Override Code

NOC and OOC
Disaccord

C : Open or Read
: Change OC

Step 2 : Press 6-digit OC.

000000

: Door Open
Read : Reading

Step 3 : Press # Button.

Match!
Opening Door

Success

C : Open or Read
: Change OC

3. How to change OC?

* Caution : The NOC and OOC should be changed together at the same time. If not, OAK can't be used.

3.1) How to change NOC?

NOC and OOC Accord

C:Open or Read
#:Change OC

Step 1 : Press # Button.

Change OC
1 : NOC 2 : OOC

Step 2 : Press 1 Button.

Change NOC
Press #

Step 3 : Press # Button.

Press New NOC

Step 4 : Press New NOC.

1 2 3 4 5 6

Press #

Step 5 : Press # Button.

Wait Please

Change NOC O.K
New NOC: 1 2 3 4 5 6

NOC and OOC
Disaccord

C:Open or Read
#:Change OC

NOC and OOC Disaccord

NOC and OOC
Disaccord

C:Open or Read
#:Change OC

3.2) How to change OOC?

NOC and OOC Accord

C:Open or Read
#:Change OC

Step 1 : Press # Button.

Change OC
1 : NOC 2 : OOC

Step 2 : Press 2 Button.

Change OOC
Press #

Step 3 : Press # Button.

Press
Present OOC

Step 4 : Press Present OOC.

0 0 0 0 0 0

Press #

Step 5 : Press # Button.

Press New OOC

Step 6 : Press New OOC.

1 2 3 4 5 6

Change OOC
#: YES C: NO

Step 7 : Press # Button.

Change OOC O.K
New OOC: 1 2 3 4 5 6

C:Open or Read
#:Change OC

Step 7 : Press C Button.

C:Open or Read
#:Change OC

NOC and OOC Disaccord

Present OOC Disaccord

Error

C:Open or Read
#:Change OC

NOC and OOC
Disaccord

C:Open or Read
#:Change OC

NOC and OOC
Disaccord

C:Open or Read
#:Change OC

4. Function Modes

* Recording Mode : Maximum 100 records from the latest one preserved.

* Erase Mode (Erase records)

4.1) Recording Mode

NOC and OOC Accord

C : Open or Read
: Change OC

Step 1 : Press C Button.

Press
Override Code

NOC and OOC Disaccord

NOC and OOC
Disaccord

C : Open or Read
: Change OC

Step 2 : Press 6-digit OC.

000000

OC Disaccord

Error

: Door Open
Read : Reading

C : Open or Read
: Change OC

Step 3 : Press Read Button.

Reading Record
Wait Please

Success
Reading (100)

Select Function
Press #

Step 4 : Press # Button.

1 : Recording
2 : Erase

Step 5 : Press 1 Button.

001 123456 UC
2008.03:28.12:00

01 : Sequence

123456 : Numbers used

UC : User Code

(UCC: UC Change, Err: Error, F: Frozen, MC: Master Code,
MCC: MC Change, OC: Override Code, OCC: OC Change)

Year : Month : Day : Hour : Minute

Step 6 : Δ ∇ buttons, audit the records.

Step 7 : Press # Button.

1 : Recording
2 : Erase

Step 8 : Press C Button.

C : Open or Read
: Change OC

4.2) Erase Mode

NOC and OOC Accord

C : Open or Read
: Change OC

Step 1 : Press C Button.

Press
Override Code

NOC and OOC Disaccord

NOC and OOC
Disaccord

C : Open or Read
: Change OC

Step 2 : Press 6-digit OC.

000000

OC Disaccord

Error

: Door Open
Read : Reading

C : Open or Read
: Change OC

Step 3 : Press Read Button.

Reading Record
Wait Please

Success
Reading (100)

Select Function
Press #

Step 4 : Press # Button.

1 : Recording
2 : Erase

Step 5 : Press 2 Button.

Erase Record?
1 : YES 2 : NO

Step 6 : Press 1 Button.

Erase Record
Wait Please

Success

C : Open or Read
: Change OC

Step 6 : Press 2 Button.

1 : Recording
2 : Erase

C : Open or Read
: Change OC

* How to change MC (Master Code) of NABI?

E → C → Present MC → E → New MC → E